



User Guide

LDP-9008D Digital Telephone

Tel: 0333 222 1133






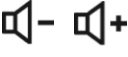


Fax: 0333 222 1134

Email: info@sirus-telecom.co.uk

Web: www.sirus-telecom.co.uk



Fixed Feature button definition

Button		Description
	Trans/PGM	This button is used to initiate a call transfer (TRS) or to enter programming mode (PGM).
	Speed	Used to access speed dialing, speed programming, saved number redial.
	DND	The DND (Do Not Disturb) feature blocks all incoming calls. When DND is active, the red LED in this button is illuminated.
	Call Back	A station can initiate a call back request to a busy station. Once that station becomes idle, the initiating station is signaled.
	Mute	Toggle outgoing audio; red LED illuminates.
	Volume	The volume button adjusts the audio levels for ringing, handset and speakerphone functions.
	Speaker	Speaker toggles the speakerphone state, and the red LED is illuminated when the speakerphone is active.
	Hold/Save	This button is used to put a call on hold or save information when programming.
Flexible		Some flexible buttons are pre-programmed in the system for line appearances, loop functions etc. The remaining flexible buttons can be user-programmed.
Visual Ringing LED		Illuminates when the phone is ringing.
LCD Display		Displays information about telephone status, dialing directories, and test message information.
Hands-free Microphone		Microphone is used for hands-free speakerphone function.

User Operation

Receiving calls _ Answering a Call While Idle :

1. Lift the handset and press the flashing Flex button (as needed), the call will be connected.

Responding to a Call While Busy

1. Press [Hold/Save] and/or
2. Press the flashing CO line button.

Answering Calls to Other Stations

To answer a call ringing at another station:

1. Lift the handset,
2. Dial 7 (Directed Call Pick-Up code),
3. Dial the Intercom Number of the ringing station; the call will be connected.

To answer a call ringing at a station in your group:

1. Lift the handset,
2. Dial * * (Group Call Pick-Up code), the call is connected.

Using Do-Not-Disturb (DND) to Block Incoming Calls

To toggle DND ON and OFF:

1. Press the [DND] button.

Forwarding calls to another Station or Voice Mail

To activate Call Forward from your phone to another phone or internal system resource:

1. Lift the handset,
2. Press the [DND] button,
3. Dial the type of forward code 1-4
4. Dial the destination number.

Placing Intercom calls

To place an Intercom call:

1. Lift the handset,
2. Dial the Intercom number of the desired station,
3. On answer or Splash tone, speak to the called party.

Using Camp-On when calling a busy station

To Camp-On (wait off-hook) for a busy station:

1. Press [*] and wait an answer.

Using Last Number Redial (LNR)

To dial the Last Number for an external call:

1. Register [Redial] button to flexible button.
2. Lift the handset,
3. Select the [Redial] button,
4. Press [▼ volume ▲] to select from the last 100 numbers dialed,(non protected memory)
4. Press the [Hold/Save].

Using System Speed Dial Numbers

To place a call using System Speed Dial:

1. Lift the handset,
2. Press the [Speed] button,
3. Dial the desired System Speed Dial bin number

Using and Entering Station Speed Dial Numbers

To place a call using Station Speed Dial:

1. Lift the handset,
2. Press [Speed],
3. Dial the desired Station Speed Dial bin number

To enter a Station Speed Dial number with CO Line and Name:

1. Press [Trans/Pgm],
2. Press [Speed],
3. Dial the desired Station Speed Dial bin number,
4. Dial CO Line or Group Access Code
5. Dial the desired number to be stored,
6. Press [Hold/Save],
7. Enter the associated name if desired, using the alpha numeric entry chart,
8. Press [Hold/Save].

To assign a Station Speed Dial number directly to a Flex button:

1. Press [Trans/pgm],
2. Press the desired [Flexible] button,
3. Dial the desired number including CO Line/Group access code
4. Press [Hold/Save],
5. Enter the associated name if desired, using the Character Entry chart,
6. Press [Hold/Save].

ACNR: To retry a busy external number until answered

To set up an ACNR, while on an outgoing call:

1. Press the [CALL BACK] button,
2. Hang-up handset.

To cancel the ACNR request:

1. Press the [CALL BACK] button.

Call Transfer: Sending a call to a different destination

To Transfer an active call:

1. Press [Trans/Pgm],
2. Call receiving party,
3. Hang-up with or without announcement.

Call Hold: Placing a call in a waiting state

To place a call on Hold:

1. Press [Hold/Save].

Joining Multiple People in a Conference

To establish a Conference:

1. Register [Conference] button to flexible button.
2. Establish call with one of the desired conference parties,
3. Select the [Conference] button,
4. Establish call with the other conference party,
5. Select the [Conference] button,
6. Select the [Conference] button again to establish the conference.

To place a Conference on Hold:

1. Press the [Hold/Save] button.

To retrieve the Conference:

1. Select the [Conference] button.

To make an External-parties-only Conference:

1. Establish conference with two external parties,
2. Select the [Conference] button to exit.

To enter pre-opened Conference Room:

1. Dial 5 7 X when X is the conference room number.

User Program Codes

- ▶ Press the [Trans/PGM] button
- ▶ Enter the desired feature code below table

CODE	FUNCTION	CODE	FUNCTION
11	Answer mode (H/T/P)	56	Create Conference Room
12	Station Name Program	57	Delete Conference Room
13	Set Wake Up	61	Speaker/Headset PGM
14	Reset Wake Up	62	Headset Ring Program
15	Language Program	71	Register Station ICLID
16	LCD Date Mode Change	72	View Station ICLID
17	LCD Time Mode Change	73	Outcall Notification Enable
18	Set Back Light	74	Outcall Notification Attempts
21	ICM Ring Type Program	75	Outcall Notification Interval
22	CO Ring Type Program	76	Outcall Notification Number
23	Set BGM	81	View IP Address
31	Temporary COS Mode	82	View Mac Address
32	Retrieve COS	83	View Keypad Version
33	Walking COS	91	MPB Version Display
34	Register Password	92	View IP Address
35	Call Log Protect		
36	SMS Message Protect		
41	Preselected MSG PGM		
42	Set User Message		
51	Mobile-Ext. Enable		
52	Mobile-Ext. Number PGM		
53	Mobile-Ext. CLI PGM		
54	Mobile Service By CLI		
55	Mobile-Ext. Service CLI		